 
 




SOFT, DRY CLOTH



 
CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : EC 60122-S5V - EMMA MEUBLE TV / TV KAST / TV CABINET


Step 6

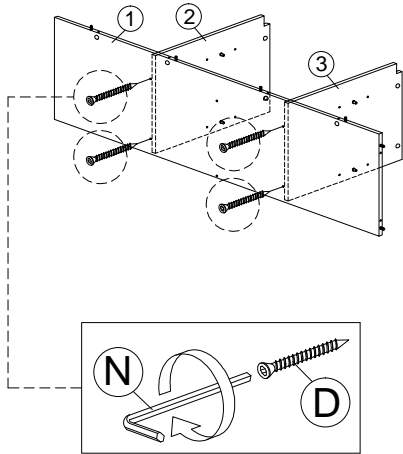


Step 7

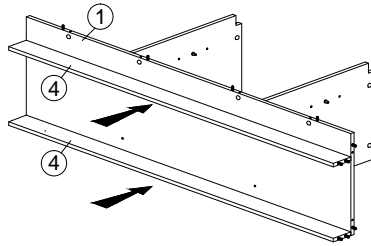


Step 8

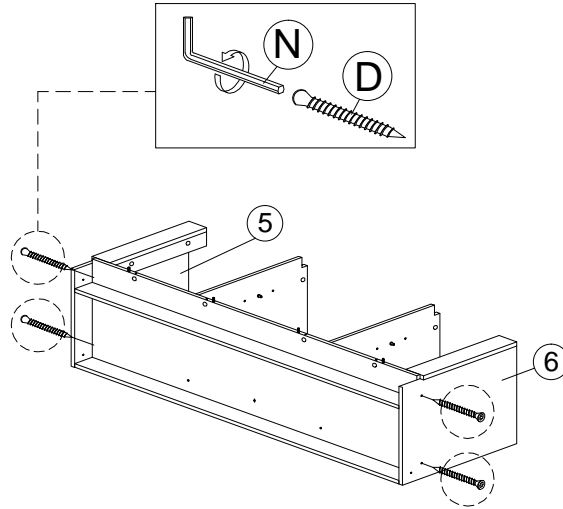


Step 9

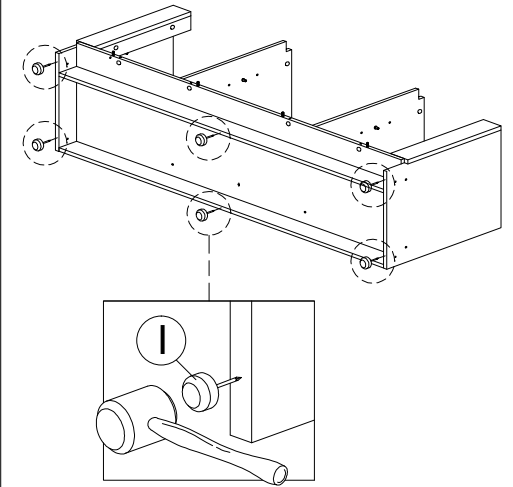


Step 10

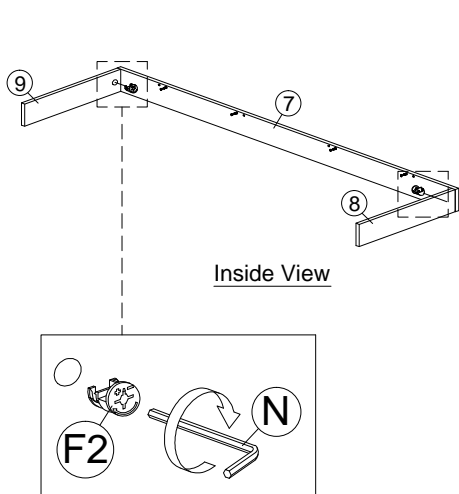

Step 11

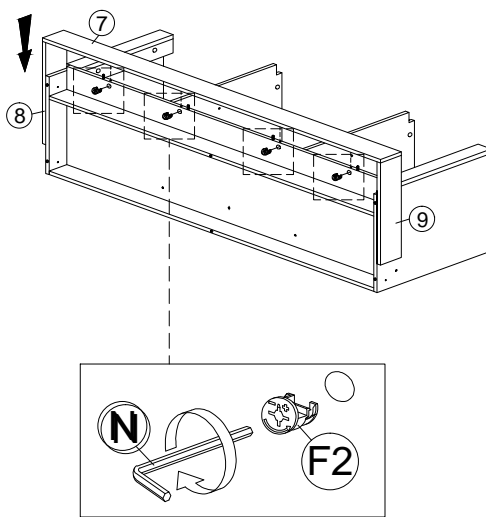

Step 12

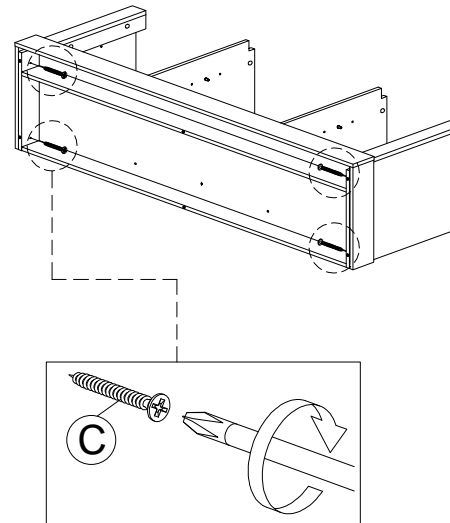

Step 13

